

Double gang, push/pull mushroom push button, red, 'Assistance Required', w/ LED annunciator and adjustable sounder, 'Assistance Requested'. Mounts easily to standard 2 gang box. Heavy-duty construction for years of trouble free operation.

When not illuminated the sign text is not visible. Button is pushed to activate, and pulled to reset.



Features

- Large, red button
- Vandal & Tamper resistant
- Indoor/outdoor applications
- N/O and N/C, DPST contacts, 6A @ 30Vdc
- 4.5"H x 4.5"W
- Sleek and Attractive Design
- Adjustable sounder
- Max Current Draw 75mA
- 12/30V AC/DC

